


MAIN RIPCORD HOUSING CHANNEL
ATTACHMENT DETAIL BOUND EDGE OUTBOARD

RETRO FIT INSTRUCTIONS FOR MAIN RIPCORD HOUSING CHANNEL WITH BOUND
EDGE ON OUTBOARD SIDE.

FIELD REPAIR ONLY.


1. REMOVE MAIN RIPCORD FROM HOUSING.
2. USING A STRAIGHT OR CURVED TACKING NEEDLE AND SINGLED WAXED SUPERTACK (BLACK), PLACE A MINIMUM OF 5 LACING STITCHES COVERING A MINIMUM OF 40MM (1.5 INCHES) BETWEEN THE LOWER AND UPPER BARTACKS.
3. START AT THE BOTTOM EDGE OF THE LOWER BARTACK AND WORK TOWARDS THE UPPER BARTACK. STITCH SECOND ROW BACK DOWN TOWARDS THE START/STOP POINT. FINISH HAND TACK ON THE BACKPAD PLACING A SURGEONS KNOT LOCKING KNOT TO SECURE HAND TACK.

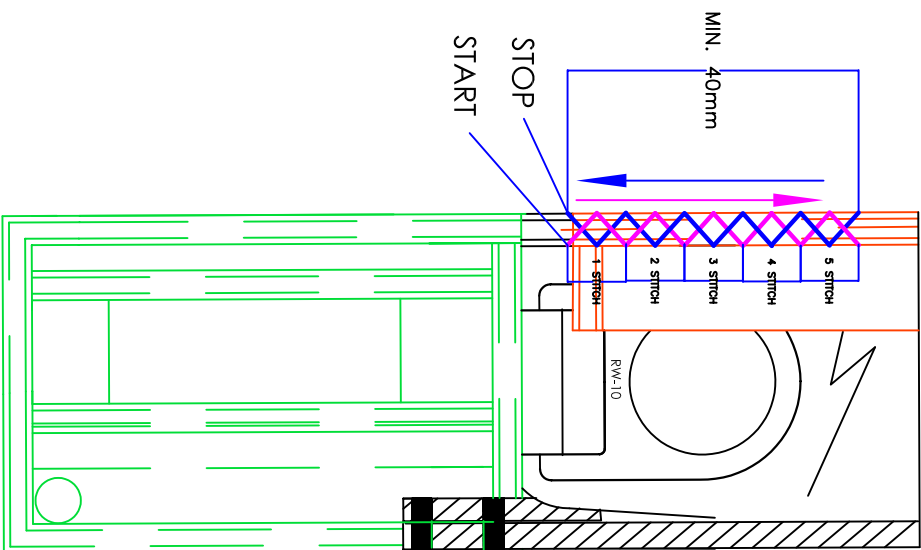

NOTE:
DRAWING IS NOT TO SCALE

- NOTE:**
1. Unless otherwise noted All Dimensions are in inches.
 2. All thread is Nylon and size E or equivalent unless otherwise noted.
 3. All rope, threed and webbing ends are hotknife sealed unless otherwise noted.
 4. Tolerance +/- 1/4 inch, unless otherwise noted.

Rev. No.	Revision Note	Date	Signature	Checked
1	HAND TACKING TO OUTBOARD FIELD FIX	6/7/05		
-				

DRAWN BY DSINGER	DATE 6/7/05	APPROVED BY APPROVED_BY	FILE NAME RETRO2-OB-WRC-HCHAN	SCALE NONE
Sun Path Products, Inc. 4439 Skydive Lane Zephyrhills, FL 33542-6650 <small>Proprietary Rights Reserved Authorized User Only</small>		TITLE PART NO MAN-1	MOD002	REVISION 1
			SHEET 1/1	